

Instructions for Mixing 1,000 L (264 gallons) Totes of BiOWiSH® Crop Liquid and BiOWiSH® Crop Liquid Green Choice

Products

BiOWiSH® Crop Liquid


BiOWiSH® Crop Liquid Green Choice

Materials needed

- 1,000L tote of BiOWiSH® Crop Liquid or BiOWiSH® Crop Liquid Green Choice.
- Electric powered blending motor, 1 horse power (HP) 1750 RPM.
- Marine impeller 12 cm (4.7 in) on 82.5 - 88.9 cm (32.5 - 35 in) shaft. Can be ordered from BiOWiSH Technologies.

Procedure

1. Clean mixing equipment prior to use.
2. Remove the security seal and cap from the top port.
3. Connect the impeller to the 1 HP motor (see diagram below).
4. Insert the impeller into top port and mount the motor to the tote.
5. Ensure the impeller blade is positioned approximately 8 cm (3 in) from the bottom of the tote.
6. Mix the product for 10 minutes prior to any sampling for use.
7. Product should be mixed continuously during application to solid or liquid fertilizer until volume in the tote drops below the impeller blade.
8. When mixing is complete, remove the blending equipment and replace the cap onto top port of the the tote.*

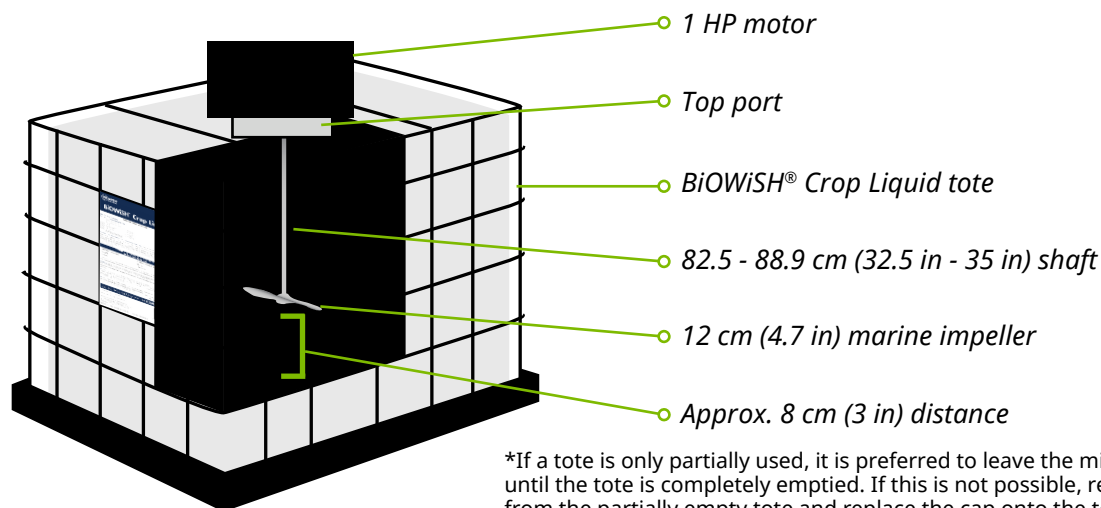

*If a tote is only partially used, it is preferred to leave the mixing equipment and seal in place until the tote is completely emptied. If this is not possible, remove the mixing equipment from the partially empty tote and replace the cap onto the top port of the tote. Remove any liquid spill from around the top port/top surface of the tote. When the tote is ready to be used again repeat the instructions above.

Storage

Store in a cool, dry location out of direct sunlight. Storage above 40°C (104°F) and below 4°C (39°F) for an extended period is not recommended. Once opened, keep in an airtight container to maintain the integrity of the product. Prevent spillage and separate from strong oxidizers.

Technical Support

Refer to BiOWiSH® Technical Bulletins at www.biowishtechnologies.com/resources/ for application instructions for coating solid fertilizers or mixing with liquid fertilizers. Please contact a distributor near you, email agronomy@biowishtech.com, biowishtech.com, or visit our website biowishtech.com.